


Job Name:	Location:
Purchaser:	
Engineer:	
Submitted To:	For: <input type="checkbox"/> Reference <input type="checkbox"/> Approval <input type="checkbox"/> Construction
Submitted By:	Date:
Unit Designation: Schedule #:	Model No.:

FEATURES / BENEFITS
<ul style="list-style-type: none"> <li>Replaces pictogram button display with text</li> </ul>

TYPICAL APPLICATIONS
<ul style="list-style-type: none"> <li>Residential</li> <li>Condominiums</li> <li>Assisted Living</li> <li>For any application requiring more intuitive user interface</li> </ul>

RETAINED CONTROLLER FUNCTIONS								
<b>OPERATION</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="padding: 2px;">Start/Stop</td></tr> <tr><td style="padding: 2px;">Fan Speed</td></tr> <tr><td style="padding: 2px;">Operation Mode</td></tr> <tr><td style="padding: 2px;">Temperature Setting</td></tr> </table>	Start/Stop	Fan Speed	Operation Mode	Temperature Setting			
Start/Stop								
Fan Speed								
Operation Mode								
Temperature Setting								
<b>MONITORING</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="padding: 2px;">Status</td></tr> <tr><td style="padding: 2px;">Malfunction Flashing</td></tr> <tr><td style="padding: 2px;">Malfunction Content</td></tr> <tr><td style="padding: 2px;">Operation Mode</td></tr> <tr><td style="padding: 2px;">Temperature Setting</td></tr> <tr><td style="padding: 2px;">Permit/Prohibit Selection</td></tr> <tr><td style="padding: 2px;">Fan Speed</td></tr> </table>	Status	Malfunction Flashing	Malfunction Content	Operation Mode	Temperature Setting	Permit/Prohibit Selection	Fan Speed
Status								
Malfunction Flashing								
Malfunction Content								
Operation Mode								
Temperature Setting								
Permit/Prohibit Selection								
Fan Speed								
<b>CONTROL MANAGEMENT</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="padding: 2px;">Field Setting Mode</td></tr> <tr><td style="padding: 2px;">Group Setting</td></tr> <tr><td style="padding: 2px;">Auto Re-Start</td></tr> </table>	Field Setting Mode	Group Setting	Auto Re-Start				
Field Setting Mode								
Group Setting								
Auto Re-Start								

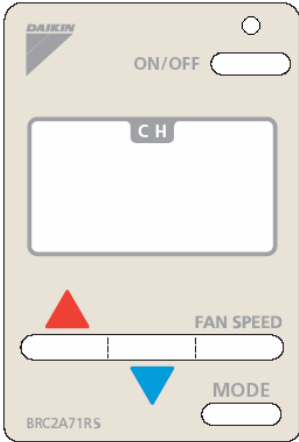

**INSTALLATION PROCEDURE**



1. Remove the cover from the remote controller. Remove standard faceplate from the cover.

2. Remove film from adhesive backing on replacement faceplate. Affix new faceplate to the remote control cover.



3. Reattach cover to remote controller.