

# DAIKIN AIR PURIFIER INSTALLATION & OPERATION MANUAL



# M Important: Read and save these instructions.

- Thank you for purchasing this air purifier.
- Please read the operation manual carefully and follow it for correct use.
- Please read the "Safety Precautions" section before use.
- Please keep the operation manual in a safe place for later reference.
- For FCC compliance information, please see the last page of this manual.



\* Learn more about the 5 Year Unit Replacement Limited Warranty at www.daikinpureair.com

FLOOR STANDING OR DESKTOP TYPE





The two-dimensional bar code is a manufacturing code. It is not a customer bar code.

- 1 -

# Contents

Read First		
	5	
Operation	Using Air purifying Operation	
Useful Functions	LOCK Function	3
Advanced Settings	Dust/Particle Sensor Sensitivity Setting	5
Maintenance	Maintenance	17 19
Troubleshooting	About the Indicator Lamps       2         FAQs       2         Troubleshooting       2         Specifications       2         Replacement Parts       2         FCC COMPLIANCE INFORMATION       2	21 22 25 25

# **Safety Precautions**

Observe these precautions in order to prevent property damage or injury.
 The consequences of incorrect use are categorized as follows:

		\land DANGER
Failure to follow these instructions properly may result in personal injury or loss of life.	Failure to follow these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

### Precautions to be observed are categorized using symbols:

 $\otimes$ 

Never attempt.

Be sui

Be sure to follow the instructions.

## WARNING Observe in order to prevent fire, electric shock or severe injury.

## Concerning the power supply plug and cord

- Do not unplug while the unit is in operation. (Fire due to overheating or electric shock may result)
   Do not plug in or unplug with wet hands. (An electric shock may result)
  - Use only a 120 V power supply. (Other power supplies may lead to fire or electric shock.) (Fire may result from overheating if the ratings of multi-socket power adapters, etc., are exceeded)
  - Do not pull on the power supply cord when unplugging. (Overheating or fire may result from wire breakage.)
  - Do not connect or disconnect the power plug to turn the unit ON / OFF. (Abusive handling may lead to electric shock or fire because of overheating.)
  - Do not perform actions that might break the power supply plug and cord. -Such actions including damaging, modifying, forcibly bending, pulling, twisting, bundling up, placing heavy objects on the power supply plug or cord.

If the power supply plug or cord is damaged, it must be replaced by the manufacturer, its service agent, or a similar qualified person in order to avoid a hazard. (Electric shock, short circuit or fire may result from use while damage.)

- Do not operate this appliance with a damaged cord or plug. Discard this appliance or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- RISK OF ELECTRIC SHOCK:

-These servicing instructions are for use by qualified personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Insert the power supply plug firmly all the way in.

 Do not use a damaged power supply plug or a loosely fitted power socket.
 (Electric shock, short circuiting or fire due to overheating may result if the power supply plug is not firmly inserted)

 Periodically wipe dust off the power supply plug with a dry cloth.

If the unit is not to be used for a prolonged period, unplug the power supply. (Fire may be caused by defective insulation resulting from dust build-up with moisture, etc.)

- When performing maintenance, inspecting or moving the unit, be sure to turn off & unplug the unit. (An electric shock or injury may result)
- Stop operation and disconnect the power plug if detecting anything strange such as burning odors. (Continued use of the unit in anything strange such as burning odors may lead to electric shock or fire because of overheating. Consult your dealer.)
- Before cleaning or relocating the unit, stop operation and disconnect the power plug from the electrical socket. (Handling with the unit plugged in may lead to electric shock or damage.)

• 3 •

# **WARNING** Observe in order to prevent fire, electric shock or severe injury.

## Do not use in the following places



- Places where oil or flammable gases are used or may leak. (Fire or smoke may result from ignition or suction toward the unit, or injury may result from degradation or cracking of plastic)
- Places where there are corrosive gases or metal dust particles. (Fire or smoke may result from ignition or suction toward the unit)
- Places where temperature and humidity levels are high or water may splash, such as a bathroom. (Fire or an electric shock may result from electrical leakage)
- Places accessible to small children. (An electric shock or injury may result)

# 


- Any abnormalities in the operation of the air purifier, such as smoke or fire, could result in severe injury or death. Turn off the power and contact the place of purchase immediately.
- If equipment utilizing a burner is used in the same room as the air purifier, there is the danger of oxygen deficiency which could lead to an asphyxiation hazard resulting in serious injury or death. Be sure to ventilate the room sufficiently to avoid this hazard.
- Safely dispose of the packing materials. Packing materials, such as nails and other metal or wooden parts, may cause cuts or other injuries.
- Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face the danger of death by suffocation.

# MARNING Observe in order to prevent fire, electric shock or severe injury.

## During use

- **Do not use chlorinated or acidic detergents.** (Injury may result from degradation or cracking of plastic, or harm may be caused to health from the production of toxic gases)
  - Keep burning cigarettes or incense sticks away from the unit. (Fire or smoke may result from ignition or suction toward the unit)
  - Do not attempt to disassemble, reassemble or repair the unit yourself. (Fire, an electric shock or injury may result)
  - Do not insert fingers, sticks, or any other item, into the air inlets or air outlet. (An electric shock, injury or damage may result)
  - Do not pour water onto the air outlet or the unit. (Fire or an electric shock may result)
  - Do not use flammable substances (hair spray, insecticide, etc.) near the unit.
  - Do not wipe the unit with paint thinner or other chemicals. (An electric shock, fire or cracking may result)

### Immediately turn off and unplug the unit if there are any signs of abnormality and malfunction

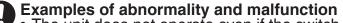

- The unit does not operate even if the switch is turned on.
- Electrical cord is damaged.
- There are abnormal sounds or vibrations during operation.
- The casing of the unit has become deformed or is abnormally hot.
- There is a burnt smell. (Malfunction, an electric shock, smoke, fire, etc., may result if the abnormality is not addressed and the unit continues to be used)

Contact the place of purchase.

# Safety Precautions

## About the deep ultraviolet (UVC) LED

This product is equipped with a deep ultraviolet (UVC) LED for sterilization. Do not operate in the following conditions.

- Do not operate with the carbon filter unit, dust collection filter and other components removed.
- Do not operate if the unit is damaged. (Harm to eyes and skin due to the escape of deep ultraviolet may result) Symptoms may appear even after a very short time, especially
  - for people who are photosensitive.
  - In case you feel unwell, please consult with a medical professional.
- Do not touch the UV unit. (Malfunction may result)

UV unit

this grip

Do not look inside the unit while it is operating.

# /! CAUTION Observe in order to prevent electrical leakage, injury or property damage.

## During use



- Small children or immobile persons (due to illness or injury) should not operate the unit by themselves.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental • capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - -Children should be supervised to ensure that they do not play with the appliance.
  - -Persons who are heavily intoxicated or have taken sleep medication should not operate the unit. (An electric shock, injury or poor health may result)
- Do not use products that contain fine powder, such as cosmetics, near the unit. (An electric shock or malfunction may result)
- Do not operate the unit when fumigating insecticide is in use. -After using insecticide, be sure to sufficiently ventilate the room before operating the unit. (Harm may be caused to health from an outflow of accumulated chemical compounds from the outlet)
- Do not use the unit near a smoke detector. -If the air coming out of the unit flows in the direction of the smoke detector, the response of the smoke detector may be delayed or it may fail to detect smoke.
- Frequently ventilate the room when using the unit together with combustion-based heating devices.

 Usage of this product is not a substitute for ventilation. (Potential cause of carbon monoxide poisoning) This product cannot eliminate carbon monoxide.

If the unit is placed within reach of a pet, be careful that the pet does not urinate on the unit or chew on the power supply cord. (Fire, an electric shock or injury may result)

## Concerning the unit body

• Do not block the air inlets or air outlet with laundry, cloth, curtains, etc. (Overheating or fire may result from poor circulation)

Do not climb, sit or lean on the unit. (Injury may result from falling or toppling)

### When moving the unit



• Before moving the unit, turn off the power.



# Do not use in the following places


- Positions from where out flowing air flows directly at a wall, furniture, curtains, etc. (Staining or deformation may result)
- Places exposed to direct sunlight (Discoloration may result)
- Positions near combustion-based heating devices and other high temperature devices (Discoloration/deformation due to overheating may result)
- Places where chemicals and pharmaceuticals are used such as hospitals, factories, laboratories, beauty salons, and photographic laboratories (Volatilized chemicals and solvents may degrade mechanical parts.)
- Places with high levels of electromagnetic waves such as near an electromagnetic cooker, speakers, etc.

The unit may not function correctly.

Places exposed to soot (conductive dust) released by candles, aromatic candles, etc. The performance of the filters may be impaired, causing the room to become dirty due to the build-up of dust that is not captured.

- Do not use cosmetics etc., containing silicone\* near the unit.
  - Hair care products (split ends coating agents, hair mousse, hair treatment agents etc.), cosmetics, antiperspirants, antistatic agents, waterproof sprays, lustering agents, glass cleaners, chemical wiping cloths, wax, etc.
  - The dust collection filter may become clogged up, resulting in loss of air purifying capacity.
- Do not use an ultrasonic humidifier or similar appliance near the unit.

The dust collection filter may become clogged up, resulting in loss of air purifying capacity.

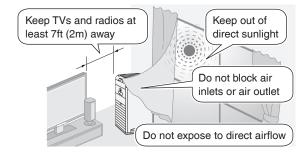



- This product cannot eliminate all of the toxic substances in tobacco smoke (carbon monoxide etc.)
- Odors cannot be completely removed if they are being constantly generated (building material odors, pet odors, etc.) Not all bacteria can be removed with UV.

# **Names of Parts and Operations**

# 

Do not lift up the unit holding the grip on the carbon filter unit. (Injury may result from the unit falling)

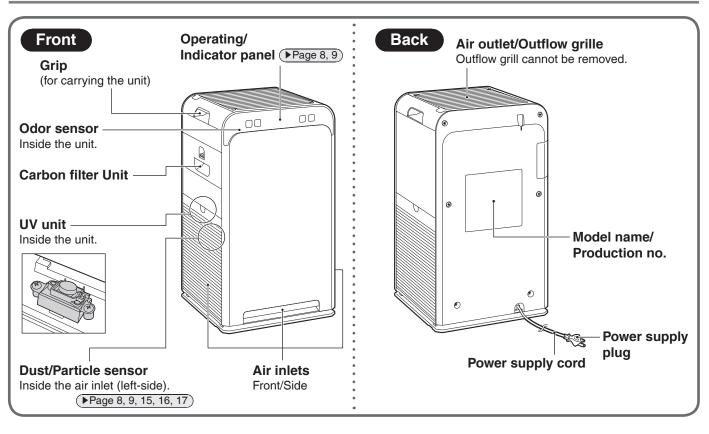

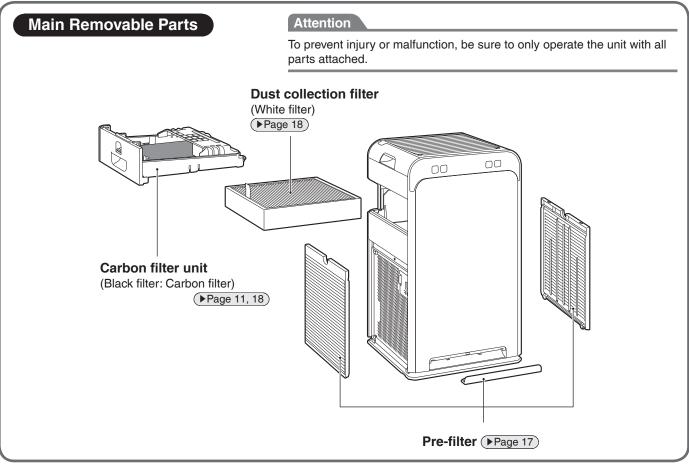

## Operating/Indicator panel

· Operation start... 2 quick beeps

• Setting change... 1 short beep

in response to large dust particles.

### Operations and operating status will be notified by tones.

Operation end .... 1 long beep Notification......3 long beeps Filter replacement lamp (orange) LOCK function lamp (orange) Lights up approx. 1 month before the dust The lamp will be lit when the LOCK function collection filter needs to be replaced, and is active. blinks when it is time to replace the dust collection filter. FAN lamps (green) **MODE lamps (green)** Indicate the active FAN setting Indicate the MODE in operation. (4 levels: Quiet, Low, Standard, Turbo). 2 2 2 A  $\overline{\phantom{a}}$ WAVE REPLACE • ----Ð FAN MODE (Push for 2 sec.) FAN UV ·... **Particles** BRIGHTNESS ni<sup>•</sup> MODE ☆ 🔆 OFF RESET (Push for 2 sec.) **BRIGHTNESS** button UV ON/OFF lamp (Blue) Lights up when UV rays are emitted. Each press changes the lamp that is lit, and cycles through indicator lamp brightness levels. ►Page 13 **UV ON/OFF button FAN/MODE** button **ON/OFF** button Press to cycle between FAN Press to turn the power ON, press UV rays are emitted. ►Page 12 (▶Page 12) settings and AUTO MODEs. again to turn OFF. ▶Page 12, 13) 2 Dust/Particle sensor lamp **3** Odor sensor lamp Indicates the volume of dust in 3 colors: green, orange, red. Indicates the intensity of odors in 3 colors: green, orange, red. · Green indicates that the air is clean. · Green indicates that the air is clean. Lamp Lamp Orange Red Green Green Orange Red color color Dust High Low Odors High Low The dust/particle sensor can detect large dust (approx. 2.5μm and above) and small particles (approx. 1.0-2.5µm). The particle lamp lights in response to small particles and the dust lamp lights

• Filter replacement reset ... 2 short beeps

# **Names of Parts and Operations**

About the LOCK function lamp
 Lamp will be lit when the lock function is active. When lit, operations will be restricted. When buttons are pressed, three short beeps will sound.


### **2** About the dust/particle sensor lamp

- After operation is started, the lamp will light green for the first minute (approx.) regardless of air impurity level.
- The responsiveness of the dust/particle sensor may be poor when airflow rate is high such as "Turbo". This is not a malfunction because the airflow rate is strong and the dust is sucked into the air inlet before it reaches the dust/particle sensor.
- If the responsiveness of the dust/particle sensor is poor, change the sensitivity setting of the sensor. (Page 15, 16)

### 3 About the odor sensor lamp


- If operation is started immediately after the power supply plug is inserted, the lamp will light green for the first minute (approx.).
- If odor intensity levels are unchanging, the sensor may not respond even if there is a strong odor in the air.
- The following types of odors may not be detected: pet odors that do not include ammonia, garlic odors, etc.
- As odor perception varies by person, in some cases an odor may be sensed even when the lamp is green.
   If the odor bothers you, switch to manual airflow rate, and select a high airflow rate. Page 12

The sensitivity of the odor sensor will be determined by odor levels in the first minute after the power supply plug is inserted. Insert the power supply plug when the air is clean (odor-free).

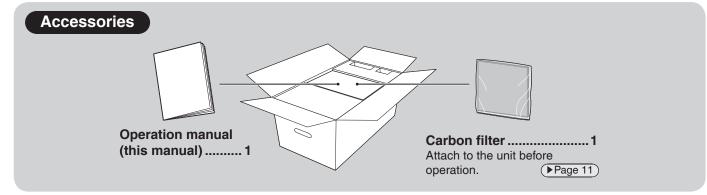

# **Preparation Before Operation**

## **1** Positioning the unit in the room

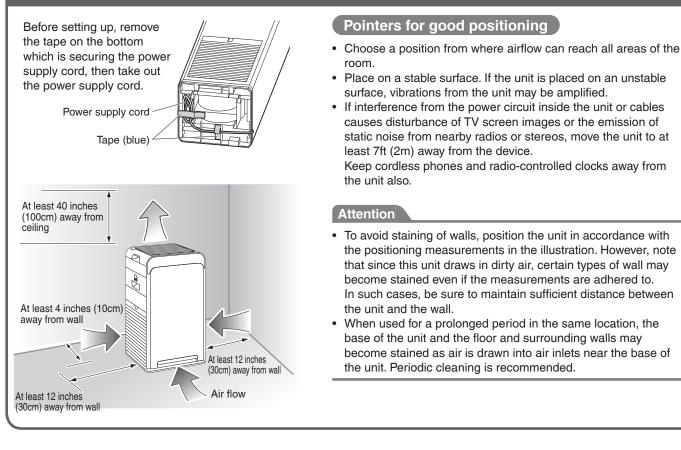

### **Read First**


# **Preparation Before Operation**

Be sure to stop the operation and remove the power supply plug before installation. (Electric shock or injury may result)

# 2 Attaching the carbon filter

**1.** Remove the carbon filter unit from the main unit.


Hold the lever of the carbon filter unit and the grip, and pull it out.

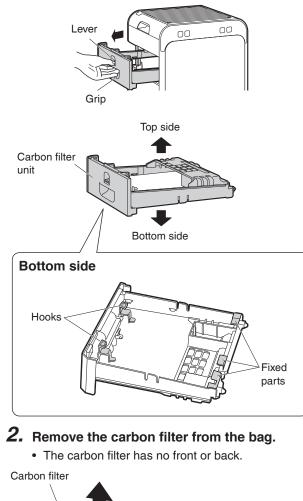


- Wear gloves when working. (Dust from the carbon filter may make your hands dirty.)
- Observe local waste separation rules when disposing of the carbon filter bag and desiccant.

**3.** Turn the carbon filter unit over and attach the carbon filter.

① Set the carbon filter under the fixed parts (3 places).

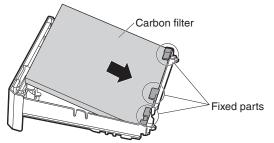


2 While pushing the hooks up, set the carbon filter under the 2 hooks.

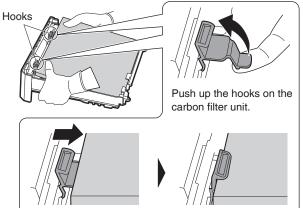

Securely attach the filter with the hooks.

**4.** Install the carbon filter unit into the main unit.

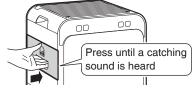


 When starting operation, if a notification tone sounds and the odor sensor lamp blinks, the carbon filter unit and the carbon filter are not properly installed.
 Re-install the carbon filter unit and the carbon filter.



# 3 Insert the power supply plug into the power socket

• The basic sensitivity of the odor sensor will be determined by odor levels in the first 1 minute (approx.) after the power supply plug is inserted every time.


Insert the power supply plug when the air is clean (odor-free).

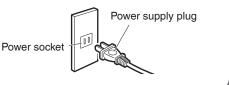



## 

Do not turn off the unit by removing the power supply plug during operation. (Fire due to overheating or electric shock may result)
 Do not operate with the carbon filter unit, dust collection filter and other components removed. (Deep ultraviolet leakage may harm your eyes and skin)

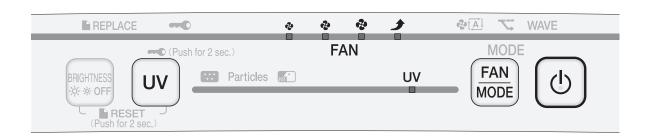

# Using Air purifying Operation (turning operation ON/OFF)

Purifies the air in the room.

Press (1)

Press again to turn OFF.

### Attention

Do not move the unit, or attach or remove components to/from the unit while it is in operation. Breakage or malfunction may result.

## AUTO UV

UV rays are emitted automatically.

- When the operation is turned ON, the dust collection filter inside the unit is exposed to UV rays (approx. 60 minutes).
- If you continue the operation, the UV emission (approx. 60 minutes) will be repeated approx. every 180 minutes after the end of the UV emission. • UV ON/OFF lamp (blue) lights up when UV rays are emitted.

### Hand-operated UV

UV rays are emitted manually.

### Press UV .

- UV rays are emitted (for about 60 minutes).
- UV ON/OFF lamp (blue) lights up during emission of UV rays.
- If <u>uv</u> is pressed during the emission of UV rays, the emission of UV rays stops and the UV ON/OFF lamp is turned off. The UV emission is repeated (approx. 60 minutes) every 180 minutes (approx.) after the UV emission is stopped. (Return to AUTO UV.)
- UV emission cannot be performed while the operation is stopped.

### Note

- Depending on the usage time, the length of time UV rays are emitted during each emission can be extended up to 180 minutes.
- When the indoor temperature is high, UV emission is stopped even though the UV ON/OFF lamp remains lit to protect the UV unit.
- At the time of purchase, the unit is set to "AUTO FAN MODE".
- When the power supply plug is removed or the unit is turned OFF, it will operate with the settings last used the next time it is turned ON.
- Operation settings cannot be changed for about 2 seconds immediately after the power supply plug is inserted.

#### Changing the Airflow Rate Select the desired FAN setting. The size of the symbols Ð 😍 : Low : Quiet varies in accordance with the FAN Press 🌶 : Turbo Ð : Standard MODE FAN setting. · Each press cycles between the FAN lamps (green) or FAN the MODE lamps (green). 🔶 🍄 (Standard) 🛑 (Quiet) = 🕨 🤣 (Low) 💻 🔶 🌶 (Turbo) AUTO FAN) WAVE (WAVE) 🔨 (ECONO) 🗲 MODE About FAN setting 🔹 Quiet A gentle breeze is emitted. Recommended for use during sleep hours. As the deodorizing capacity is reduced, it is recommended that the FAN setting be set to "Standard" or above if odor needs to be quickly eliminated from a room. The ambient air is quickly purified using a large airflow rate. 🗲 Turbo Recommended for use while you are cleaning up a room.

# Operation



## **LOCK** function

Button operation is restricted, preventing misoperation.

### UV for about 2 seconds.

- Hold down v for about 2 seconds again to turn off LOCK function.
- Lamp will be lit when the lock function is active. When lit, operations will be restricted. When buttons are pressed, three short beeps will sound.

### Note

Hold down

- If the unit is unplugged when LOCK function is active, LOCK function is turned off.
- The LOCK function lamp (orange) lights up when the function is active.

## Adjusting Indicator Lamp Brightness

Indicator lamp brightness is adjustable.

Press BRIGHTNESS

• Each press of cycles between the settings.



### Note

- This function is useful if the lamps bother you during sleep hours etc.
- The FAN lamps, MODE lamps, and Filter replacement lamp do not turn off even if the brightness is set to OFF. These lamps will be set to DIM.
- If any of the below buttons are pressed when brightness is set to OFF, brightness will change to DIM and return to OFF after about 10 seconds.


- If operation is started when brightness is set to OFF, brightness will change to DIM and return to OFF after about 10 seconds.
- If you unplug the power supply plug while the indicator lamp brightness is set to "DIM" or "OFF", the setting will return to "BRIGHT".


# **Operating MODEs**

Select a MODE specific to your needs.

Airflow rate is adjusted automatically when the unit is running in a MODE.


• Each press cycles between the MODE lamps (green) and FAN lamps (green).

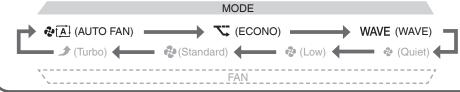

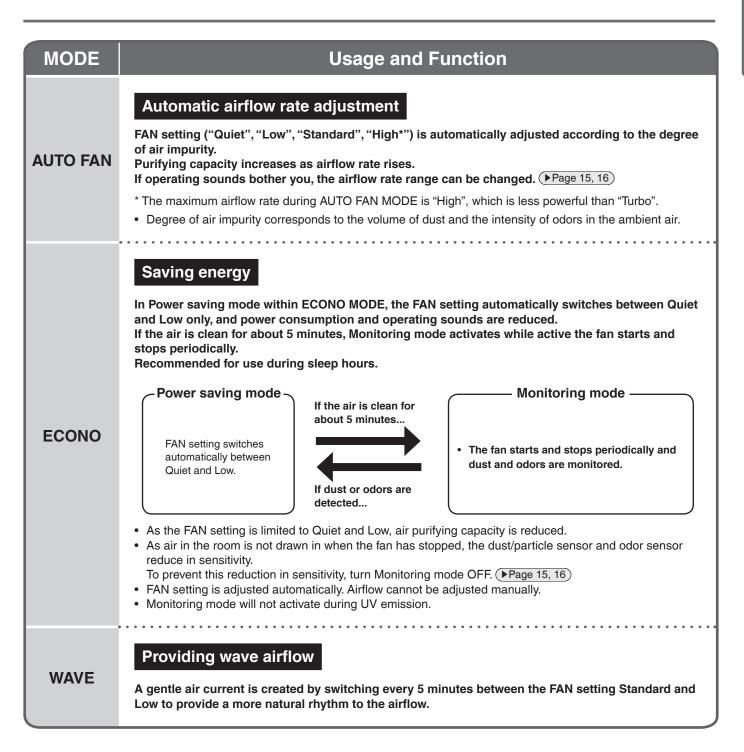

# **Changing the Setting**

Function	1		
Dust/Particle Sensor Sensitivity Setting (Low, Normal, High) Setting at time of purchase: Normal The sensitivity setting of the dust/particle sensor can be changed (Low, Normal, High). • "Low" makes the sensor less responsive. "High" makes the sensor more responsive.	Operation can be performed either during operation or while operation is stopped. Hold down () for about 5 seconds and when a short beep sounds, press while pressing () Release both () and when a short beep sounds	The FAN lamp corresponding to the currently set sensitivity will light up after blinking. "Low" "FAN "Normal" FAN "High"	
Monitoring mode within ECONO MODE (ON/OFF) Setting at time of purchase: ON When the fan has stopped in Monitoring mode, the sensors reduce in sensitivity. To prevent this reduction in sensitivity, turn Monitoring mode OFF. • If set to OFF, monitoring stops.	Operation can be performed either during operation or while operation is stopped. Hold down $\overline{MODE}$ for about 5 seconds and when a short beep sounds, press UV while pressing $\overline{MODE}$ Release both $\overline{MODE}$ and UV when a short beep sounds	The FAN lamp $$ (Quiet) will light up after blinking. $ \\ FAN$ [Blinking $\rightarrow$ Lit up] The ECONO MODE lamp changes as below according to the current setting. $ \\  \\ ON"$ $ \\  \\  \\ OFF"$ $ \\ MODE$ [Unlit]	
Airflow rate range for AUTO FAN (4 levels/3 levels) Setting at the time of purchase: 4 levels If operating sounds during AUTO FAN MODE bother you, switch from "4 levels" to "3 levels". Airflow rate range 4 levels: "Quiet" "Low" "Standard" "High" 3 levels: "Quiet" "Low" "Standard"	Operation can be performed either during operation or while operation is stopped. Hold down (1) for about 5 seconds and when a short beep sounds, press FAN MODE while pressing (1) Release both (1) and FAN MODE when a short beep sounds	AUTO FAN MODE lamp will light up after blinking. WAVE MODE [Blinking → Lit up] According to the current setting, the FAN lamp will be displayed as follows. "4 levels" FAN [Unlit] "3 levels" FAN [Blinking → Lit up]	

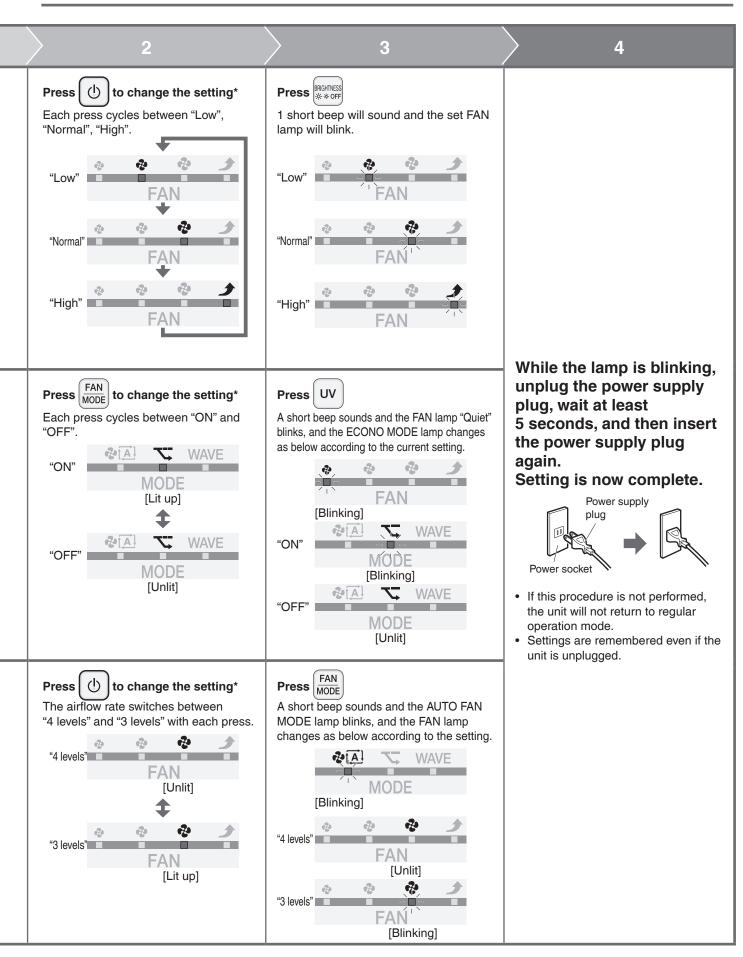


\* If the lamps do not change even after the settings were changed, unplug the unit, wait at least 5 seconds, then re-insert the power supply plug and repeat the above procedure from the beginning.

# Maintenance

Be sure to stop operation and unplug the power supply plug before performing maintenance. (Electric shock or injury may result)

WARNING -

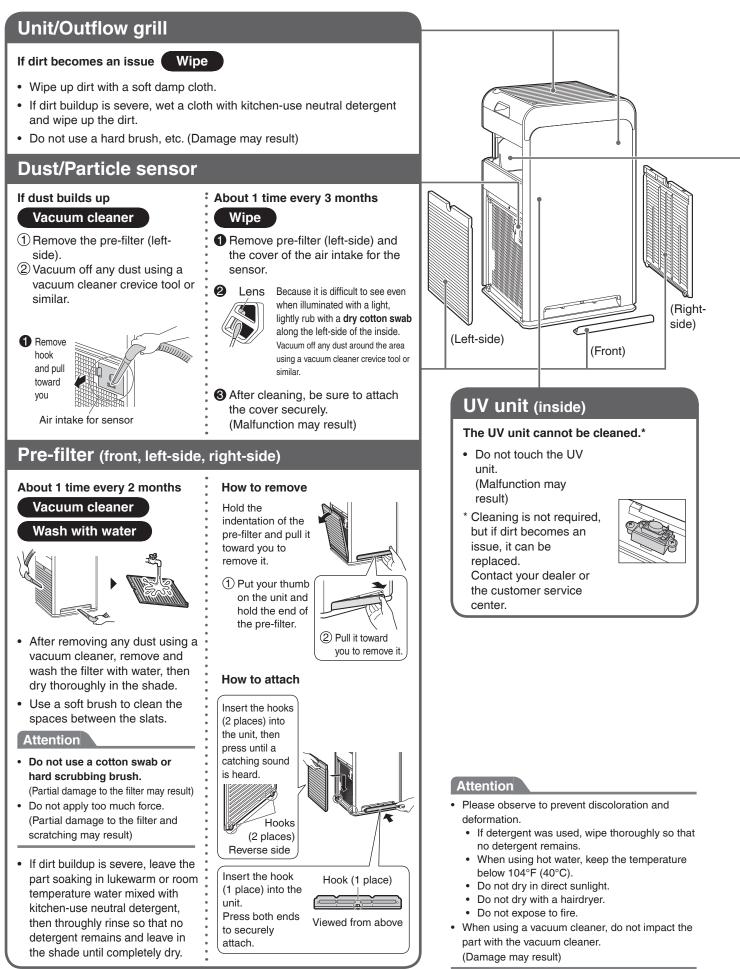


17

# 

- Do not use gasoline, benzine, thinner, polishing compound, paraffin, alcohol, etc. (Cracking, electric shock, and ignition of fire may result)
- Do not wash the unit with water. (Electric shock and fire or malfunctioning may result)

### Attention

Be sure to operate with a dust collection filter, and carbon filter unit attached. If the unit is operated without the filters attached, malfunction may result.

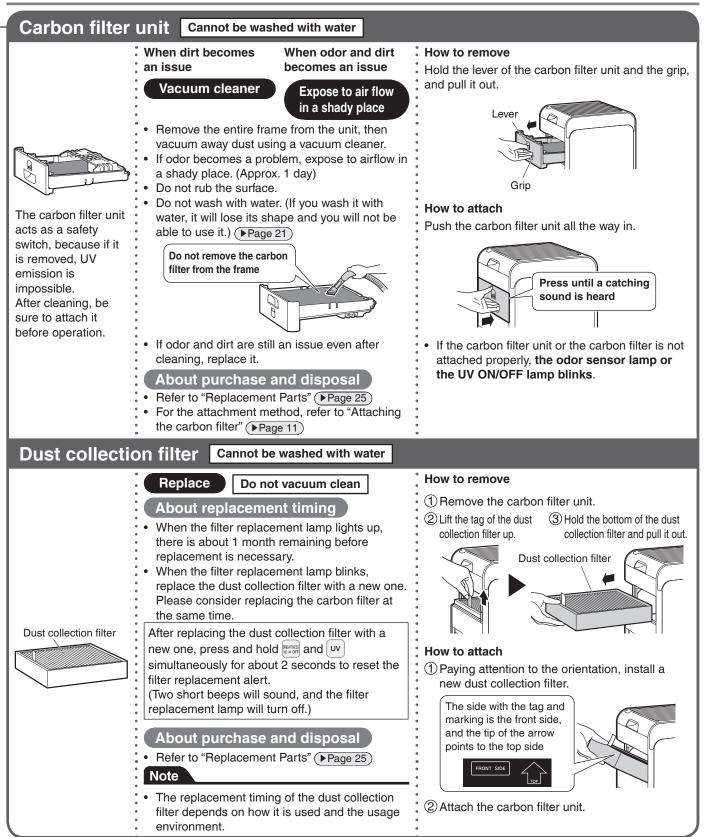

# Maintenance


# When Not Using the Unit for a Prolonged Period

- **1.** Unplug the power supply.
- **2.** Clean the parts. Page 17, 18
- In particular, parts cleaned with water should be completely dry. (Mould may result from remaining moisture)
- 3. Cover the air outlet and other openings with a plastic bag or similar to prevent dust entry, and store the unit upright in a dry place. (Malfunction/breakage may result from storing the unit upside down or horizontally)

# **About the Indicator Lamps**

## **Operating/Indicator panel**


Check the indicator lamp and take the following actions.

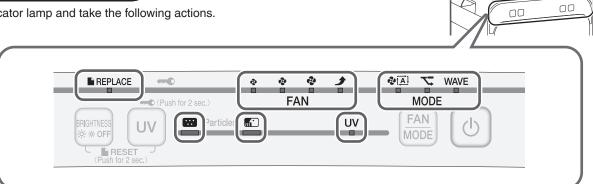

Indicator lamp	Cause/Solution		
The odor sensor lamp blinks	Blinks if the carbon filter is removed or the carbon filter unit is not pushed all the way in. (When blinking, the airflow rate decreases.) → Attach the carbon filter, then insert the carbon filter unit all the way. (▶Page 11, 18)		
The UV ON/OFF lamp blinks	<ul> <li>Blinks if the carbon filter is removed or the carbon filter unit is not pushed all the way in.</li> <li>(UV emission is not performed when blinking.)</li> <li>→ Unplug the power supply plug, attach the carbon filter, insert the carbon filter unit all the way, and then restart operation. (▶Page 11, 18)</li> </ul>		
The filter replacement lamp lights up	The dust collection filter needs to Use a dust collection filter for repl → Contact the place of purchase.	acement. (Page 25)	
The filter replacement lamp blinks	The dust collection filter needs to	be replaced. (Page 18)	
All 3 MODE lamps blink simultaneously	An electrical component is malfunctioning.		
The dust lamp blinks (green)	→ Contact the place of purchase.		
	Are the pre-filter and dust collection filter attached? Lamps may blink when the components are removed and the unit is operated.	<ul> <li>If all components are attached</li> <li>An electrical component is malfunctioning.</li> <li>→ Contact the place of purchase.</li> </ul>	
		<ul> <li>If a component is not attached</li> <li>→ Unplug the power supply plug, reattach the components, and then restart operation.</li> </ul>	
All 4 FAN lamps blink simultaneously	Is there a buildup of dust on the	<ul> <li>If there is not a buildup of dust</li> <li>An electrical component is malfunctioning.</li> <li>→ Contact the place of purchase.</li> </ul>	
	pre-filter?	<ul> <li>If there is a buildup of dust</li> <li>→ Unplug the power supply plug, clean the pre-filter, and then restart operation. ▶Page 17</li> </ul>	
	Is the air outlet blocked?	<ul> <li>If the air outlet is not blocked</li> <li>An electrical component is malfunctioning.</li> <li>→ Contact the place of purchase.</li> </ul>	
is the all outlet blocked?		<ul> <li>If the air outlet is blocked</li> <li>→ Remove any obstacles blocking the air outlet, and then restart operation.</li> </ul>	

FAQs

Please check first before contacting us.

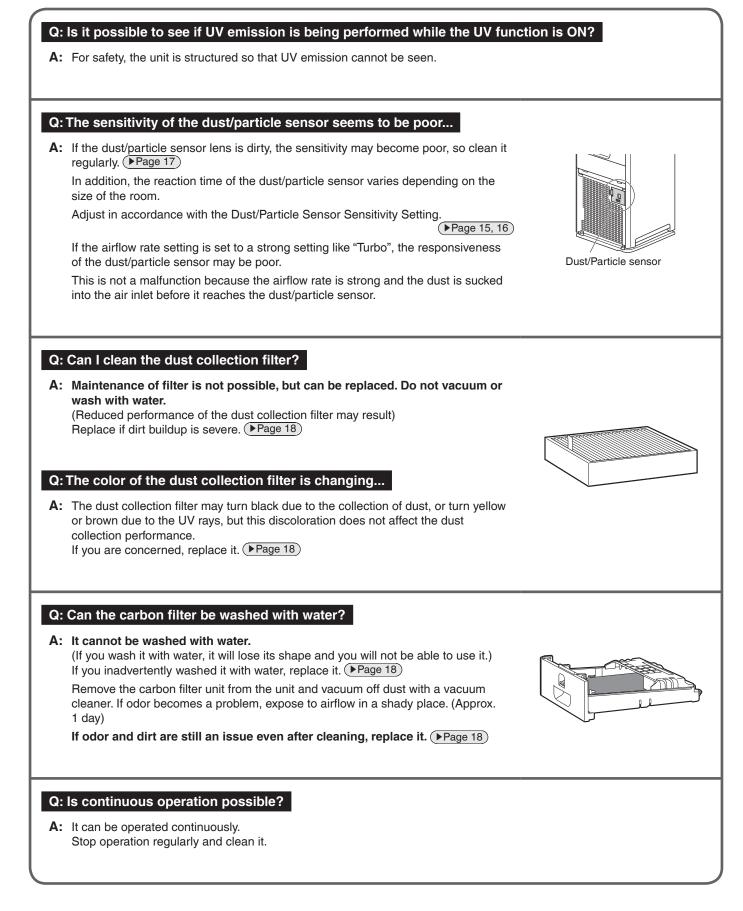

# Troubleshooting

### Please check the following before requesting repairs or making an inquiry. If there is still an abnormality, contact your dealer or the customer service center.



# Not a problem

This case is not a problem.



### Check

Please check again before requesting repairs.

# Noises

Phenomenon	Check points	
A whistling and fluttering sound during operation	<ul> <li>Is there a buildup of dust on the pre-filter?         <ul> <li>Clean it.</li> <li>Is the dust collection filter clogged up?</li> <li>Depending on usage conditions, the dust collection filter may become clogged up, shortening its service life.</li> <li>Replace the dust collection filter.</li> </ul> </li> </ul>	
The operating sound is loud	<ul> <li>Is the dust collection filter attached properly?</li> <li>→ If not attached properly, the sound may be loud.</li> </ul>	

# Indicator lamps

Phenomenon	Check points		
The indicator lamps other than the FAN/MODE/Filter replacement lamp do not light up The indicator lamps turn off about 10 seconds after operation start	<ul> <li>Is the indicator lamp brightness set to "OFF"?</li> <li>→ If indicator lamp brightness is set to "OFF", lamps other than the FAN/ MODE/Filter replacement lamps do not light up.</li> <li>→ If operation is started while the indicator lamp brightness is set to "OFF", the lamps are displayed with "DIM" brightness for about 10 seconds and then the brightness changes to "OFF".</li> </ul>		
The FAN lamps ("✤ (Quiet)", "✤ (Low)", "✤ (Standard)", "♪ (Turbo)") all blink at the same time	<ul> <li>Are the pre-filter and dust collection filter attached? Lamps may blink when the components are removed and the unit is operated.</li> <li>[If a component is not attached]</li> <li>Unplug the power supply plug, reattach the components, and then restart operation.</li> </ul>		
	<ul> <li>[If all components are attached]</li> <li>An electrical component is malfunctioning.</li> <li>→ Contact your dealer or the customer service center.</li> <li>Is there a buildup of dust on the pre-filter?</li> </ul>		
	<ul> <li>[If there is a buildup of dust]</li> <li>→ Unplug the power supply plug, clean the pre-filter, and then restart operation.</li> </ul>		
	<ul> <li>[If there is no buildup of dust]</li> <li>An electrical component is malfunctioning.</li> <li>→ Contact your dealer or the customer service center.</li> <li>Is the air outlet blocked?</li> </ul>		
	<ul> <li>[If the air outlet is blocked]</li> <li>→ Remove any obstacles blocking the air outlet, and then restart operation.</li> </ul>		
	<ul> <li>[If the air outlet is not blocked]</li> <li>An electrical component is malfunctioning.</li> <li>→ Contact your dealer or the customer service center.</li> </ul>		

# Troubleshooting

Phenomenon	Check points
The dust/particle sensor lamp remains orange or red	<ul> <li>Is there a buildup of dust on the air intake for dust/particle sensor or the surrounding area?         <ul> <li>Vacuum off any dust from the air intake using a vacuum cleaner.</li> <li>Page 17</li> </ul> </li> <li>Is the cover of the air intake for dust/particle sensor removed?         <ul> <li>Attach the cover securely.</li> <li>Is the dust/particle sensor lens dirty?</li> <li>Wipe off the dirt on the lens with a dry cotton swab, etc.</li> <li>Page 17</li> </ul> </li> <li>Is the pre-filter dirty?         <ul> <li>Clean it.</li> </ul> </li> </ul>
There is an odor but the odor sensor lamp remains green	<ul> <li>Was a strong odor already present at the time you plugged in the power supply plug?</li> <li>The sensitivity of the odor sensor will be determined by odor levels in the first minute after the power supply plug is inserted. Page 9         If you remove the power supply plug when the air is clean (odor-free), wait at least 5 seconds, then reinsert the power supply plug and start operation, the reference odor level that determines the sensitivity of the odor sensor will be adjusted.     </li> </ul>
The dust collection filter was replaced, but the filter replacement lamp has not turned off	<ul> <li>Did you press and hold and uv simultaneously for about 2 seconds?</li> <li>Even if the dust collection filter is replaced, the filter replacement lamp will not turn off unless and uv are pressed and held simultaneously for about 2 seconds.</li> </ul>
The odor sensor lamp blinks	<ul> <li>Are the carbon filter and carbon filter unit attached?</li> <li>→ Attach the carbon filter, then insert the carbon filter unit all the way.</li> <li>▶ Page 11, 18</li> </ul>
UV ON/OFF lamp blinks	<ul> <li>Are the carbon filter and carbon filter unit attached?</li> <li>Unplug the power supply plug, attach the carbon filter, insert the carbon filter unit all the way, and then restart operation.</li> </ul>

# ■ Air purifier function

Phenomenon	Check points		
There is no air purifying effect	<ul> <li>Is it installed in a location where the airflow cannot reach, or are there obstacles around it?</li> <li>Choose a location where there are no obstacles and the airflow coming out of the unit can reach all areas of the room.</li> <li>Is the filter replacement lamp lit or blinking?</li> <li>Replace the dust collection filter.</li> </ul>		
There is an odor coming from the air outlet	Is the filter replacement lamp lit or blinking?		

Phenomenon	Check points
Air does not come out	<ul> <li>Is the air outlet or air inlet blocked? If the air outlet is not blocked, an electrical component is malfunctioning.</li> <li>→ Contact your dealer or the customer service center.</li> </ul>
The airflow rate cannot be adjusted	<ul> <li>P Is the odor sensor lamp blinking?</li> <li>→ Attach the carbon filter, then insert the carbon filter unit all the way.</li> <li>▶ Page 11, 18</li> </ul>

# Other


Phenomenon	Check points
The fan stops during operation	<ul> <li>Page 14</li> <li>Page 14</li> <li>Are you operating with the pre-filter and dust collection filter removed?</li> <li>If you forget to attach a component, the fan may stop to protect the electrical components.</li> <li>→ If you forgot to attach a component, remove the power supply plug, attach the component correctly, and then restart operation.</li> </ul>
The TV screen shows interference The radio emits static noise	<ul> <li>Is the TV/radio installed within 7ft (2m) of the unit, or is an indoor antenna used near the unit?</li> <li>Are the TV/radio power supply cords or antenna cable routed near the unit?</li> <li>★ Keep the unit as far away from the TV/radio/antenna as possible.</li> </ul>

# **Specifications**

Model name	MCB50YSAU			
Power supply	Single phase 120V 60Hz			
Operation mode		Air Purifying		
Operation mode	Turbo	Standard	Low	Quiet
Airflow rate (CFM) [m <sup>3</sup> /h]	176 [300]	113 [192]	70 [120]	38 [66]
External dimensions (in.) [mm]	19-11/16 (H) × 10-5/8 (W) × 10-5/8 (D) [500 (H) × 270 (W) × 270 (D)]			
Weight (lbs.) [kg]	15 [6.8]			
Power supply cord length (in.) [m]	71 [1.8]			

• Even when the power is off, power is consumed to run the microcomputer (less than 1W).

# **Replacement Parts**

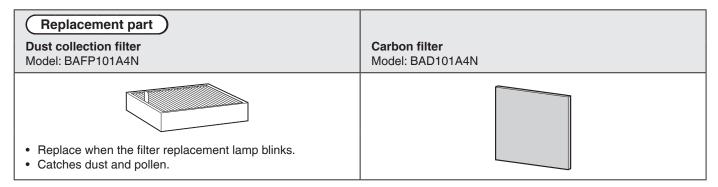

- · If any component is used while dirty
  - The air purifying effect cannot be obtained
  - The deodorizing capacity will be reduced
  - Odors will be emitted
- Dispose of the filter according to local waste separation rules.
  - Dust collection filter ... Material: Polyester/Polypropylene/Acrylic
  - Carbon filter ... Material: Paper
- The following filters are not for sale (only service parts).

Pre-filter Left-side/Right-side	Pre-filter Front
(Parts No. 2533838)	(Parts No. 2542286)

- In the event that there is any conflict in the interpretation of this manual and any translation of the same in any language, the English version of this manual shall prevail.
- The manufacturer reserves the right to revise any of the specification and design contain herein at any time without prior notification.
- All images are for illustration purposes only.

### FCC COMPLIANCE INFORMATION

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC's Rules. Operation of this device is subject to two conditions:

(1) This device may not cause harmful interference; and(2) This device must accept any interference received, including interference that may cause undesirable operation.

And this device meets the applicable Industry Canada technical specifications: CAN-ICES-003(B)/NMB-003(B).

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Responsible Party:

Goodman Manufacturing Company, L.P. 19001 Kermier Road Waller, TX 77474 1-713-861-2500 https://www.goodmanmfg.com

### **Proprietary Notice**

This document and the information disclosed herein are proprietary data of Daikin North America LLC. Neither this document nor the information contained herein shall be reproduced, used, or disclosed to others without the written authorization of Daikin North America LLC, except to the extent required for installation or maintenance of recipient's equipment.

### **Copyright Notice**

Copyright 2021, Daikin North America LLC All rights reserved.

Daikin North America LLC reserves the right to discontinue or change at any time, specifications or designs without notice or without incurring obligations.

## DAIKIN INDUSTRIES, LTD.

Head office: Umeda Center Bldg., 2-4-12, Nakazaki-Nishi, Kita-ku, Osaka, 530-8323 Japan

Tokyo office: JR Shinagawa East Bldg., 2-18-1, Konan, Minato-ku, Tokyo, 108-0075 Japan http://www.daikin.com/global/

### DAIKIN NORTH AMERICA LLC

19001 Kermier Road Waller, TX 77484 https://www.daikinpureair.com https://www.daikincomfort.com



The two-dimensional bar code is a manufacturing code. 3P671617-2A M21B437 (2111) HT

